


INSTRUCTIONS

Note: Please long press TALKING button 3 seconds to turn on the unit. Hold MODE and TALKING button 3 seconds to enter power-saving mode.

● TO CHANGE MODES

Repeatedly press **MODE** to change to various modes in the following order:

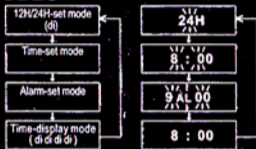

● TO ANNOUNCE THE TIME

Press **TALKING** to hear the time announcements.

● TO SET 12H/24H TIME FORMAT

1. In the time-display mode, press **MODE** to enter the 12/24hour-setting mode, "12H" or "24H" flashes on the LCD screen.
2. Press **HOUR, ALM ON/OFF** to set "12H" or press **MINUTE, HR. REPORT** to set "24H".
3. Repeatedly press **MODE** to return to the Time-display mode.

Note: During setup, if no key is pressed for more than 30 seconds, the watch will return to Time-display mode.

● TO SET THE TIME

In Time-display mode, press **MODE** twice to enter Time-set mode, the hour and minute digits flash. Repeatedly press or hold down **HOUR, ALM ON/OFF** to set the correct hour and **MINUTE, HR. REPORT** to set the correct minute.

● TO SET THE ALARM TIME

In Time-display mode, press **MODE** three times to enter Alarm-time-set mode, "AL" appears and hour and minute digits flash. Repeatedly press or hold down **HOUR, ALM ON/OFF** to set the correct hour and **MINUTE, HR. REPORT** to set the correct minute.

● TO TURN ON/OFF THE ALARM AND SNOOZE

In Time-display mode, to turn on the alarm, repeatedly press **HOUR, ALM ON/OFF** until

you hear "Alarm on" and the announcement of alarm time, and "🔊" appears. To turn on the snooze function, repeatedly press **HOUR, ALM ON/OFF** until you hear "Snooze on" and the announcement of alarm time and "SNZ" appears. To turn off the alarm, repeatedly press **HOUR, ALM ON/OFF** until you hear "alarm off". At the preset alarm time, the alarm sounds for 60 seconds. To silence the alarm sooner, press any key, thereafter the alarm repeats five times in every five minutes. You can do the following to turn off the snooze function:

1. Press **MODE**: this turns off the snooze function ("SNZ" stops flashing) and the alarm will not sound again until next day at the preset time.
2. Press **HOUR, ALM ON/OFF**: this terminates the snooze and the alarm completely.

● TO TURN ON AND OFF HOURLY TIME ANNOUNCEMENT

This watch can automatically announce the time every hour on the hour from 0:00 to 23:00. To turn on the hourly time announcement, repeatedly press **MINUTE HR. REPORT** until "🔊" appears. To turn off, repeatedly press **MINUTE HR. REPORT** until "🔊" disappears.



● TO REPLACE THE BATTERY

This watch uses one CR2025 Lithium battery for power. When the LCD dims, sound weakens or function is abnormal, replace the battery, follow these steps:

1. Use a Phillips screwdriver to remove the four screws on the back cover, remove the back cover.
2. Remove the old battery and install a new one with the "+" polarity facing up.
3. Replace the back cover.