


SONNET

Model No. R-127

AM/FM/Weather Band Radio with Flashlight

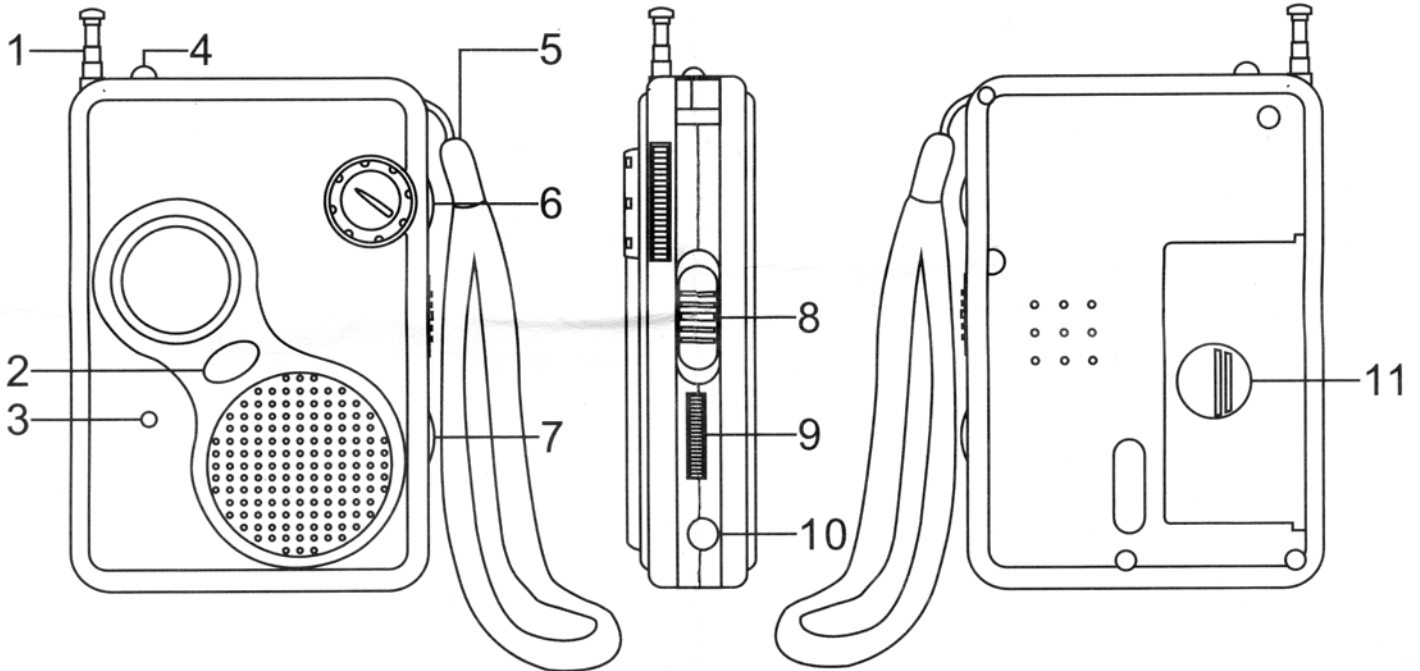

- | | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> 1. Antenna 2. Light On Button 3. Power Indicator 4. LED Light (White) 5. Hand Strap 6. AM/FM/WB Tuning Knob | <ul style="list-style-type: none"> 7. Speaker 8. Band Selection Switch 9. Radio On/Off & Volume Adjusting Knob 10. 3.5mm Earphone Jack 11. Battery Door |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

This radio receives 7 weather band channels plus AM and FM radio broadcasts. Only one 24 hour weather channel is available in each area. It also has a bright LED flashlight.

WEATHER BAND

Select WB on the band selection switch. Use off volume knob to turn the radio on and adjust as desired. Use the tuning knob to receive the channel available in each area. Extending the telescopic antenna will help sensitivity where reception is weak.

The weather band frequencies are:

Channel	MHZ
1 _____	162.400
2 _____	162.425
3 _____	162.450
4 _____	162.475
5 _____	162.500
6 _____	162.525
7 _____	162.550

LED FLASHLIGHT

Press and hold light switch to operate.

AM/FM FREQUENCIES

Use band selector knob for AM/FM and adjust volume control knob used for station selection.

BATTERIES

This radio uses 2 AAA batteries, not included.

Remove the battery compartment door on the back of the radio and observe the battery polarity when installing, replace door.