

# **REIZEN 12-Digit Jumbo Talking Calculator**

(Item 752975)

## **Main Functions:**

- 1) Time display (shows hour, minute and seconds)
- 2) Daily alarm or one-time alarm (beep alarm sound and three melodies are available)
- 3) 12-digit talking calculator

## **Key Descriptions:**

- 1) Number input keys (numbers 0-9 and decimal point)
- 2) Arithmetic function keys (+, -, X, ÷, %, =)
- 3) Memory keys (M+, M-, MR, MC)
- 4) ALM/TIME: Use to change clock between 12/24 hour modes and to change between Alarm/Time modes
- 5) AL ON/OFF: Turn alarm on/off
- 6) SET: Time and alarm set
- 7) UP & DOWN: Adjust time/alarm time, choose alarm sound
- 8) UNIT: Choose to hear 2-digit numbers announced as numbers or individual digits (ex. hear 10 as “ten” or “one zero”)
- 9) VOL: Volume control - Low, Hi, Off

## **Operations:**

- 1) Time Setting:
  - a. Press right side of “ALM/TIME” key for time display mode
  - b. Press “TIME” to change 12/24 hour mode
  - c. Press “SET” key to access time set mode. The hour will flash; press up/down to adjust. Press “SET” again to access minute adjusting mode; press up/down to adjust. Press “SET” again to exit time set mode.
- 2) Alarm Setting:
  - a. Press left side of “ALM/TIME” key to enter alarm mode.
  - b. Press “ALM ON/OFF” to choose daily alarm on or off.
  - c. Press “SET” to set alarm; the hour will flash, press up/down to adjust. Press “SET” again to access minute adjusting mode; press up/down to adjust. Press “SET” again to exit alarm set mode.
  - d. Press up or down to listen to the 4 alarm sound choices (beep and 3 melodies.) Press “TIME” to exit alarm mode.

3) Silencing Alarm Sounds:

- a. When the alarm rings, press any key to turn it off.
- b. The beep alarm rings for one minute if not turned off manually. Melody alarm lengths vary.

4) Display Mode:

- a. Under Time setting mode, if you don't press any key in 10 seconds, it returns to time display mode.
- c. Under alarm display, if you don't press any key in 8 minutes it will return to time mode.

Batteries:

Uses 2 AAA batteries (not included.) Be sure to install batteries with the correct polarity in the compartment marked with a tactile arrow at the bottom on the back of the calculator.

90-DAY MANUFACTURER'S LIMITED WARRANTY

REIZEN, Inc.  
P.O. Box 3312  
Farmingdale, NY 11735

[www.ReizenUSA.com](http://www.ReizenUSA.com)