

# VocaTime

## Instruction Manual Dual Voice Talking Analog Watch



**IMPORTANT:** Upon arrival if the watch hands are **NOT** moving it has been placed in sleep mode - see below to Wake up the Watch.

**Thank you for purchasing the VocaTime Talking Watch!**

Your New watch features the latest technology including **Dual Voice technology**- allowing you to choose or change between hearing either a Male or Female Voice. It also features **Auto Synchronizing Technology** which allows the user to simultaneously set the time for both the Voice and the Hands of the watch with one easy and Voice Guided procedure. Your watch features advanced technology which enables a single Quartz crystal to be powered by a single battery, in order to control the synchronized Timekeeping for both the voice and the hands of the watch.

**Please Note:**

- a). **CROWN IS NOT TO BE USED FOR TIME SETTING**
- b). **Watch button S2 is flush** with the watch case, you will need to press this with a small pointed item such as a pen tip, or an end of a paper clip.



## Quick Start

Your Talking Watch may have arrived in ‘sleep mode’ (watch hands not moving)

**Wake up the watch** (unless the hands of the watch are already moving)

**Press the S1 button** (next to 2 o’clock) for around 2 seconds or until the hands start to spin. The hour and minute hands will spin around until they reach the internal reference timekeeping before leaving the factory.

## Button Functions:

### Time and Day Talking:

**Push S1 once** to talk Time. The watch will speak Hour and Minute

**Push S1 twice** to talk Day, Month, Date and Year

**Press S1 three** times to announce Alarm Time and if Alarm is ON or OFF

### Change Voice: (Male or Female)

1. **Push and Hold S1** until new voice announces current time setting or calendar.

## Time Setting and Watch Hands synchronization

### When setting Time- DO NOT USE THE CROWN!

**Watch hands do not get set by using crown!**

**Time is always set by voice procedure below**

1. **Press S2** (4 o’clock button) once, watch announces “*Set Time, Press 2 o’clock button to Set*”
2. **Push S1** to confirm Time Change is desired. Watch announces, “*Press 4 o’clock button to Set Hour, 2 o’clock button to Confirm.*”
3. **Press 4 o’clock button** (S2) to change the Hour.
4. **Press 2 o’clock button** to confirm hour chosen. Watch announces “*Press 4 o’clock button to Set Minute, 2 o’clock button to Confirm.*”
5. **Press 4 o’clock** (S2) to change the Minute.
6. **Press 2 o’clock button** to confirm minute chosen. Watch announces “*Confirm. X:xx pm. Please Wait.*” The watch hands will spin to the new set time.

### Set Date

1. **Press 4 o’clock button (S2) twice.** Watch announces “*Set Date, Press 2 o’clock button to Set.*”
2. **Press 2 o’clock button (S1)** to confirm Date Change is desired. Watch announces “*Press 4 o’clock button to Set Year, 2 o’clock to Confirm.*”



3. **Press 4 o'clock button (S2)** to change Year.
4. **Press 2 o'clock (S1) button** to confirm Year chosen. Watch announces "*Press 4 o'clock button to Set Month, 2 o'clock button to Confirm.*"
5. **Press 4 o'clock (S2) button** to change Month.
6. **Press 2 o'clock (S1) button** to confirm Month chosen. Watch announces "*Press 4 o'clock button to Set Date, 2 o'clock button to Confirm.*"
7. **Press 4 o'clock button (S2)** to change Date.
8. **Press 2 o'clock (S1) button** to confirm Date chosen. Watch announces "*Press 4 o'clock button to Set Day of the Week, 2 o'clock button to Confirm.*"
9. **Press 4 o'clock button (S2)** to change Day of the Week.
10. **Press 2 o'clock button (S1)** to confirm Day of the Week chosen. Watch announces "*Confirm and announces date.*"

## **SET ALARM**

1. **Press 4 o'clock button (S2)** recessed button **three times**.
2. **Press 2 o'clock button (S1) button** to confirm you want to change the alarm time.
3. **Press 4 o'clock button (S2)** recessed button **to choose the hour**.
4. Then **2 o'clock button (S1) button to confirm** the hour.
5. **Press 4 o'clock button (S2)** recessed button to choose the minute.
6. Then **2 o'clock button (S1) button to confirm** the minute.
7. The alarm time you set will be *announced*.

## **ALARM ON/OFF**

1. **Press 4 o'clock button (S2)** recessed button **four times**.
2. **Press 2 o'clock button (S1) button** to confirm you want to change the alarm status on/off.
3. **Press 4 o'clock (S2)** recessed button to change alarm ON / OFF status.
4. **Press 2 o'clock button (S1) button to confirm**. The watch will then *announce if the alarm is ON or OFF*.

## **TROUBLESHOOTING:**

**Watch second hand is running one step every 2 seconds** indicates that the battery level is low. Replace with a new CR2025 battery.



**Time announcement is different from the analog time of the watch** indicates that you need to **synchronize hands to match with the announced time**. Go to **“Synchronize Hands to match time announcement”** for details.

### **Synchronize Hands to match Time Announcement**

- 1. Pull out the crown of the watch** when the **Second hand reaches 12:00:00** o'clock so that the **second hand stops at 12 o'clock**. If you miss 12 o'clock you need to wait for the next chance.
- 2. Turn the crown of the watch to set Hour and Minute hands at 12 o'clock.**
- 3. Now that the Hour, Minute, and Second hands are all pointing at 12 o'clock with the Crown pulled out Press S1 (2 o'clock button) for more than 5 seconds.**
- 4. Push-in the Crown and release the S1 button.**
- 5. The watch hands will start to spin** to match the spoken time.
- 6. Please wait until the watch resume normal running.**
- 7. After the watch resumes to normal, check to see if the time announcement and watch hands are synchronized by pressing S1 (2 o'clock button) once.** If synchronized, you have successfully set the watch. If not, repeat Steps 1 to 8.

### **Battery Change**

**Your watch uses one CR2025 battery.** Replacement batteries should be installed by Talking watch experts when available (**you can contact 1-800-522-6294 for our authorized battery Replacement Service**) or use a trained jeweller or watch specialists to replace batteries being careful NOT to damage to internal components this watch.

When installing a new battery, it is better to go to a trained jewellers or watch specialists to install new batteries, while being careful to avoid any damage to components of the watch.

- 1. Open the watch at the back.**  
Carefully remove the bottom, make sure not to lose the waterproof seal.
- 2. Pick up the battery spring on the right.**
- 3. Take out the battery and insert a new one (watch the polarity!”+”up).**
- 4. Now push the battery spring down.**
- 5. Before you put the case-back on again, make sure the waterproof seal is correctly in place.**

**After a new battery is replaced, you will need to set the time of your watch as listed below:**

- 1. Go to Time Setting and Watch Hands synchronization instructions for details.**
- 2. Set Time and Calendar.** Please refer to **“Set Time”** and **“Set Date”** for details as



mentioned in this instruction manual.

3. Then you need to synchronize the hands to match the talking time that you have set by following steps from the “Synchronize Hands to match time announcement” instructions above.

### **SLEEP MODE:**

If your watch will not be used for a while, in order to save the battery life you may want to utilize the sleep mode

### **Placing watch in Sleep Mode:**

1. While watch is running normally, **Press and hold S1**, button.
2. **Press and hold S2 at the same time (now holding 2 buttons)** until the second hand begins spinning fast.
3. **Release all buttons.** The watch hands **will spin to 1:00:00**, and then it will go to sleep.

### **To Wake Up and begin usage again:**

**Press any button for 3 seconds.** After the watch has awoken, it will spin to match the internal time. Please wait until the watch resumes to normal movement.

### **Manufacturer Limited Warranty:**

*VocaTime* guarantees your Talking watch to be free of manufacturer defects for a period of TWO (2) years from the date of purchase. We will fix or replace (at our discretion) your defective watch at NO charge.

**FOR WARRANTY SERVICE:** Please call us at 1-800-522-6294 prior to shipping your watch for warranty coverage. When sending please ship postage prepaid and insured to the address below, (Including your original receipt and \$6.00 to cover the cost of shipping back to you). Please note that customer abuse, neglect, or any attempt to open and repair this watch voids the warranty.

**VocaTime**  
**P.O. Box 3209**  
**Farmingdale, NY 11735**  
**Phone: 1-800-522-6294**

**Version: 01 19 18**