

# TALKING WATCH INSTRUCTIONS

## 1-BUTTON ANALOG TALKING WATCH


1. Crown-Adjust hour and minute hands.
2. S1-Talking voice function, press down to activate voice chip to speak time.

### SET HOUR AND MINUTE HANDS IN TIME:

- Pull out the crown and scroll the crown to set hour and minute hands until the desired time have been set. Then push back the crown to normal position.

### SET TALKING VOICE TIME PROCEDURES:

- Use a pin to press S2 to set hour time.
- Use a pin to press S3 to set minute time and all is now done.

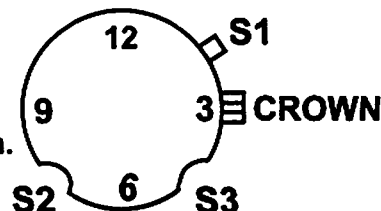

## TALKING VOICE QUARTZ ANALOG ALARM WATCH

### ( I ) BASIC FUNCTION FOR EVERY PUSH BUTTON AND CROWN:

1. Crown adjust hour and minute hands.
2. S1-Talking voice function. Press down to activate voice chip to speak time.

Not for use with  
Calendar/Timer Watch  
(See Reverse)

3. S2 - A) "Chime off" and "chime" function:

- When "chime" is on it activates voice to tell time every hour.


- B) Another function: after pushing S3 to the "set time" or "set alarm time" mode. Each push of the S2 button advances voice time one minute.

4. S3 - Set mode: A)time B) set time C)set alarm time

5. S4 - A) Set "alarm off"

- B) Set "alarm on" : by following choice of sound
  - : "rooster" sound alarm
  - : "bi bi" sound alarm
  - : "dong dong" sound alarm

- C) Another function: after pushing S3 to the "set time" or "set alarm time" mode, each push of the S4 button advances voice time one hour.

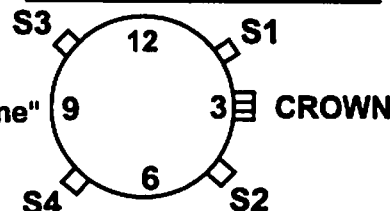

### ( II ) INSTRUCTION:

#### 1. SET HOUR AND MINUTE HANDS IN TIME:

- Pull out the crown and set hour and minute to correct time. Then push back the crown to normal position.

#### 2. SET TALKING VOICE TIME PROCEDURES:

- Press S3 set mode button to "set time" mode.
- Press S4 to set hour time.
- Then press S2 to set minute time. (always allow 15 sec. time to set the minute time to match minute hands before sweep hand touches 12: otherwise, that would create a minute difference between minute hands and voice time.)
- Press S3 back to "time" mode for normal use and all is done.
- Press S1: talking voice will have same time as hour & minute hands shown.

#### 3. SET ALARM VOICE TIME PROCEDURES:

- Press S3 set mode button to "set alarm time" mode.
- Press S4 to set hour time.
- Then press S2 to set minute time and all is done.
- Press S3 back to "time" mode for normal use.
- Press S4 to select any of 3 alarm sound as alarm on function:
  - either "rooster" or "bi bi" or "dong dong"
- Press S4 to alarm off - that would turn off alarm function.

#### 4. TO CHECK EXISTING ALARM AND CHANGE ALARM TIME:

- A) Press S3 set mode button to "set alarm time" mode then press S1 button to hear previous existing alarm time.

- B) To change alarm time, follow #3 instruction.

#### 5. SET CHIME ON/OFF PROCEDURES:

- Press S2 alternately to activate on and off voice function to speak the time every hour.